



To use your intersection track with conventional train track:
Simply use the rail joiners attached to each side of the intersection track to connect conventional train track. We suggest you use roadbed material under the train track to elevate it to meet the height of the intersection track.

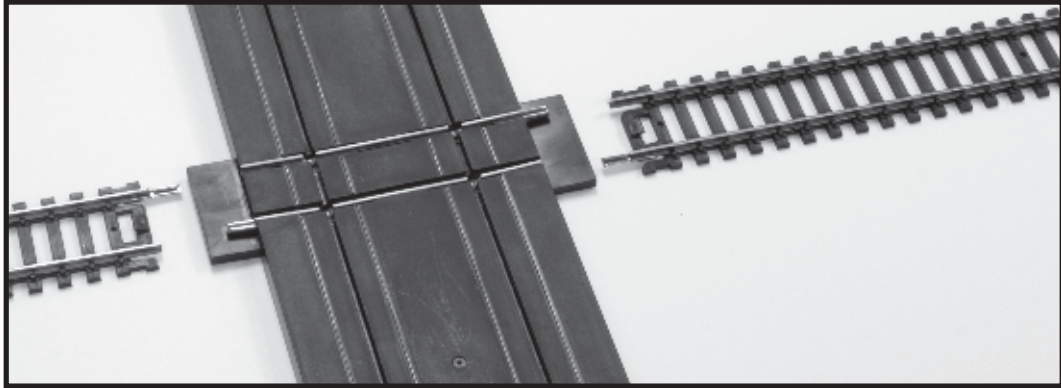

To use your intersection track with Power-Loc™ train track:
You'll need to purchase one pack of Power-Link™ Adapters (item # 433-21314). There are two adapters per pack. Connect the rail-joiner end of the adapter track to the intersection track on each side. Now, connect your Power-Loc track to the ends of the adapter track to complete your layout.

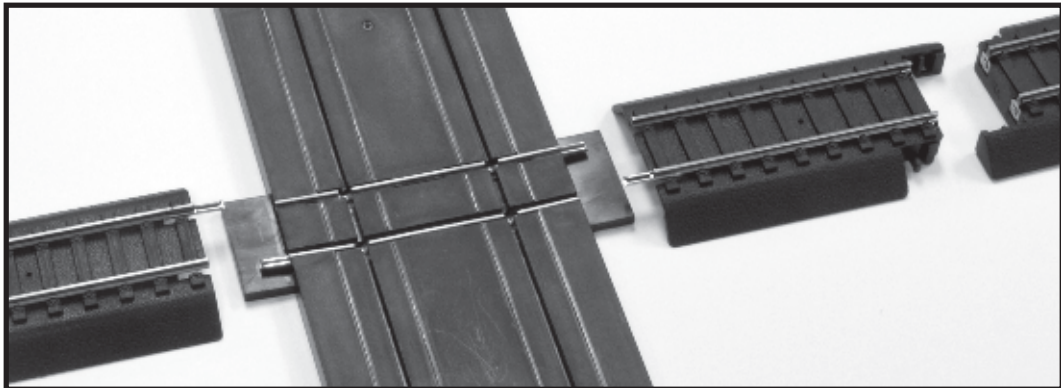

To use your intersection track with other brands of roadbed train track (Bachmann®, Atlas® etc):

You'll need to purchase two packs of Power-Link Adapters (item # 433-21314). Connect the rail-joiner end of the adapter track to the intersection track on each side. Connect the Power-Loc end of a second Power-Link adapter to the first. Do this on both sides of the intersection track. You should now have a rail-joiner end free on each side of the intersection track. You may now connect other roadbed track that uses rail-joiners for connecting the rest of your track layout.

