





HO Structure Kit
ANTIQUES BARN
933-3339

Thanks for purchasing this Cornerstone kit! All parts are styrene, so use compatible glue and paint. For more ideas to detail your scene, ask your dealer, visit our Web-site waltherscornerstone.com or see the latest Walthers HO Scale Model Railroad Reference Book.


1. Glue side and end walls together (1, 2, 3, 4). Rest this assembly while drying on top of the base (5) to insure squareness, but do not glue base on at this time.

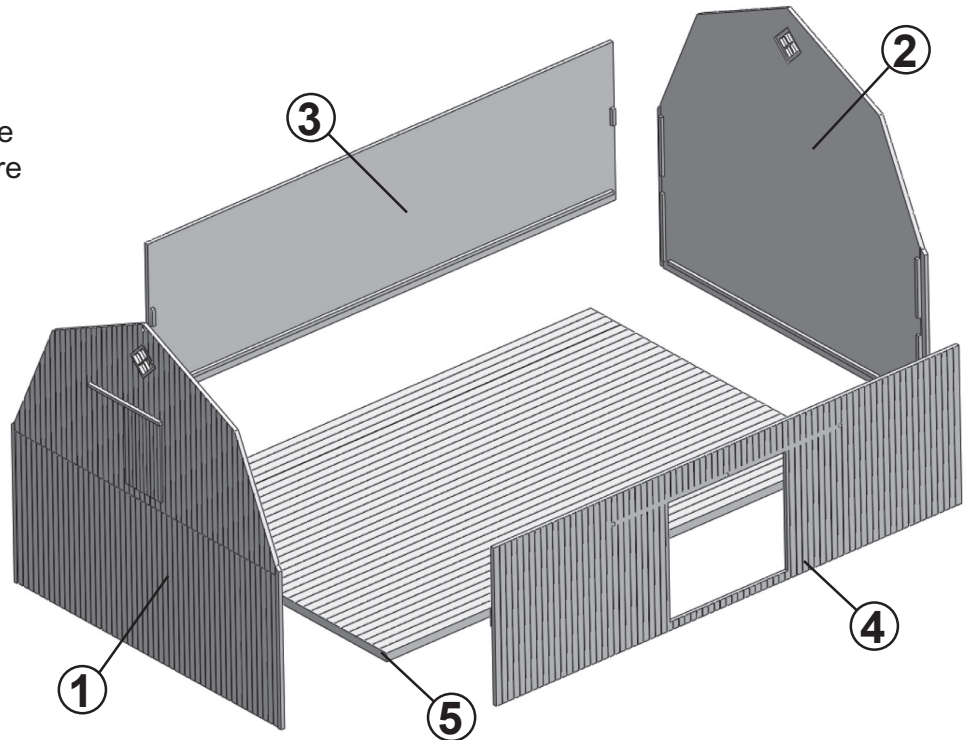

2. Add upper roof sections 6 & 7, (right and left hand specific) to the wall assembly. Lower roof (8) is reversible and can be used on either right or left side.

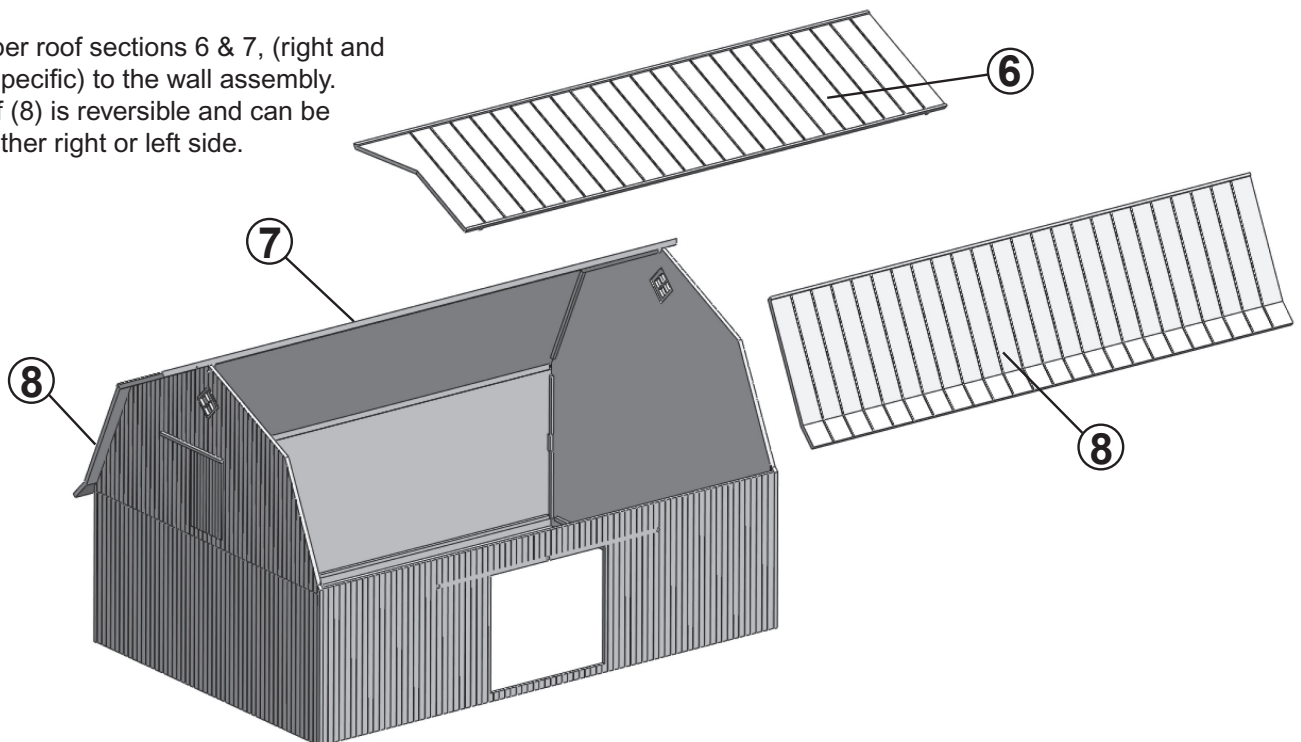

3. Doors (13) can be positionable if desired. To use this feature, doors must be placed in the door track (12) first, then glue the track to side wall (4) using the pegs only. Keep glue out of the door track as much as possible. Note: Doors cannot be added after track is glued in place due to "stops" at the edges of door track.

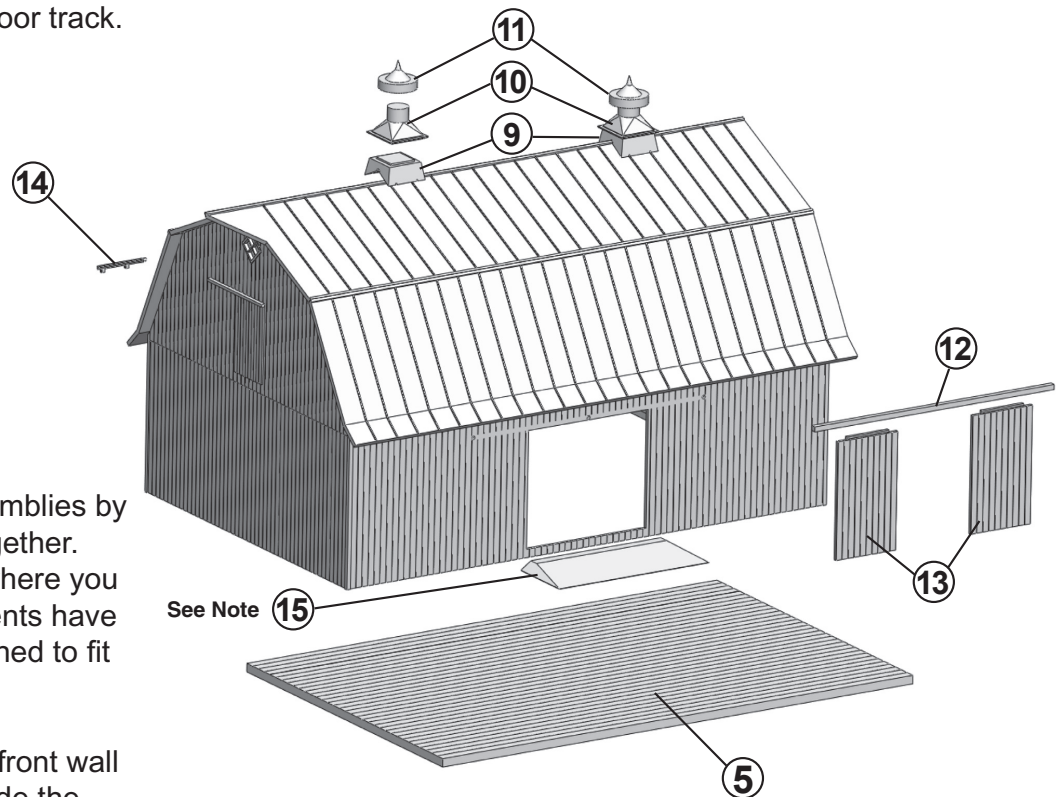

4. Create 2 roof vent assemblies by gluing parts (9, 10, 11) together. When dry, add them anywhere you wish on the roof. Note: vents have notches in the base designed to fit over the roof ribs.

5. Add hoist beam (14) to front wall (1). Floor (5), fits up inside the barn wall assembly, and can now be glued in place.

6. IMPORTANT NOTE: If you are using this barn as-is, add ramp 15 as shown. If you wish to add our cast resin Fieldstone Barn Base and Ramp to your model (Cornerstone item 933 - 3331, sold separately), discard part 15. Instead, use the special ramp casting included with the Fieldstone Barn Base kit, which will match the increased wall height.

DECALING

1. After cutting out the decal, dip in water for 10 seconds, remove and let stand for 1 minute. Slide decal onto surface, position and then blot off any excess water.
2. Lightly brush Micro Sol® on top. This will soften the decal allowing it to conform to irregular surfaces. DO NOT TOUCH DECAL while wet!
3. When the decal is thoroughly dry, check for any trapped air bubbles. Prick them with the point of a small pin or hobby knife blade and apply more Micro Sol®.

PAPER SIGNS

Carefully trim out the desired sign with scissors or sharp hobby knife and straight edge. Brush a light coat of water-based glue over the back of the sign. Use tweezers to pick up the sign and position it. Lightly press it in place with your fingers to secure it to model.