



HO Scale
Structure Kit
933-3331


FIELDSTONE BARN BASE & RAMP

Thank you for purchasing this kit. Tools to help you with assembly include a #11 knife, rough file, finish file, 100 grit sandpaper, small square, ACC (super-glue) and dust mask.

After sanding and assembling the base, apply primer and finish colors.

NOTE: We suggest wearing a dust mask and working in a well ventilated area when sanding.


Step 1

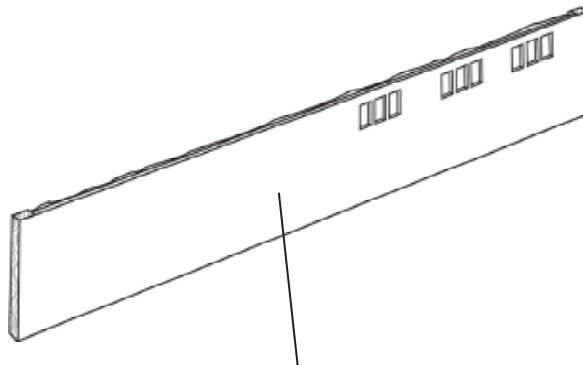

Press back of walls onto 100 grit sandpaper. Sand each piece until the back is smooth and window openings are free of material. Make sure sandpaper is on a flat, smooth surface.

NOTE: If adding to Meadowhead Barn (933-3330, sold separately) or Sparrow Creek Barn (933-3341, sold separately), test fit to barn model and adjust fit as needed.


Step 2

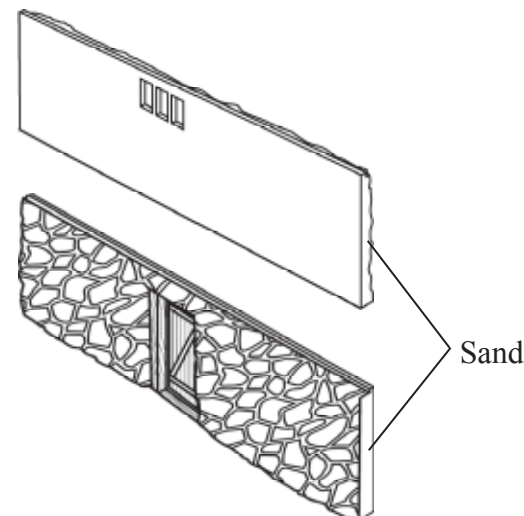

Sand both ends of shorter (end) walls until square. These walls should be the same length when finished.

Step 3


Ends of short walls fit inside longer walls to form corners.

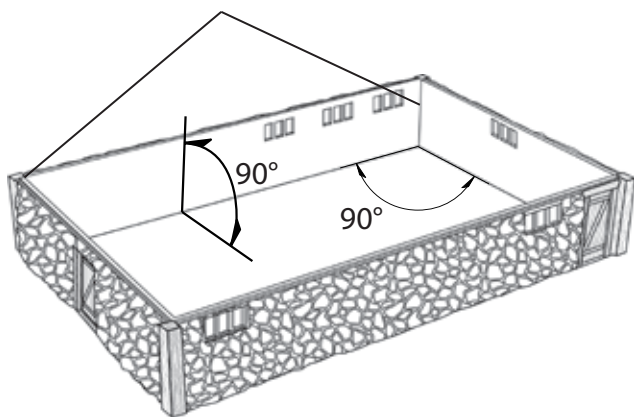

Glue walls together. Walls should be 90° (right angle) to each other and plumb vertically when gluing.

Step 4



Back of ramp should be filed or sanded for a tight fit against wall. Remove material as needed from wall to minimize exposed gap where ramp and wall meet.

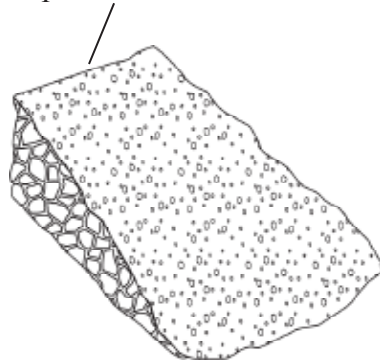

Glue ramp to wall, aligning it with the barn door location.

Step 5

After painting, Meadowhead Barn (933-3330, sold separately) or Sparrow Creek Barn (933-3341, sold separately) may be fit onto barn base, if desired.

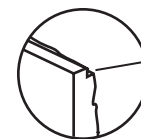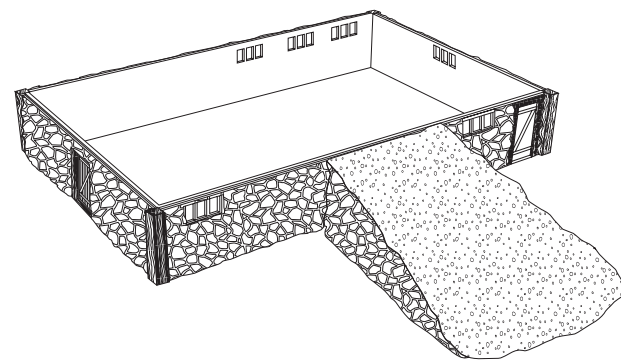

Barn walls will rest on outside of lip of base.