



# HO Scale Kit **CONVEYORS** 933-3149


Thanks for purchasing this Cornerstone Series® Kit! Please read all instructions before starting. All parts are molded in styrene plastic, so use glues and paints which are compatible.

## Before Assembly

Check kit for proper number of parts. Cut and file flash from parts. Sand edges to ensure right angle joints with no gaps between parts.

## Assembly

1. Glue Side Trusses (52) to the Conveyor Top (51), noting that the small vertical extensions on the side trusses attach to the crosswise ribs on the bottom of part 51. Also, note the small pegs on one side of parts 52. These should face inward.
2. Glue the Bottom Truss (53) between the Side Trusses (52), resting it against the pegs on the side trusses.
3. Glue the conveyor section together end to end to the length you want. Glue Supports (54), fitting the tabs on top of the supports into the slots between the sections. The height of the supports can be adjusted by cutting off the bottom, and removing any partial bracing.

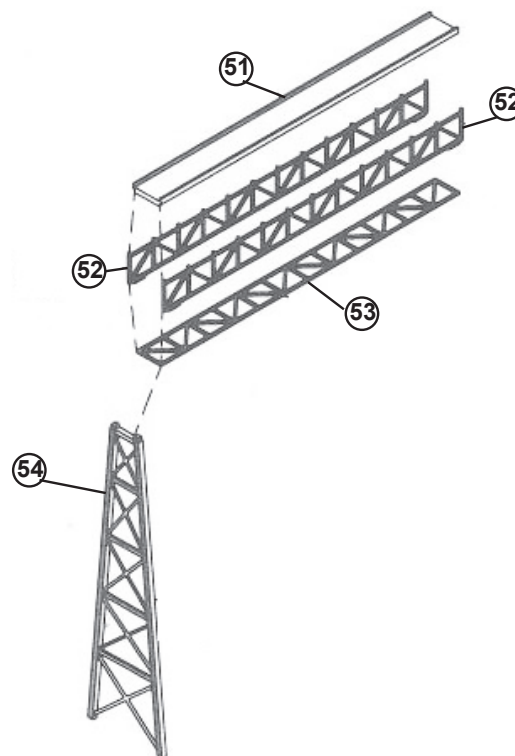

© 2012 Wm. K. Walthers, Inc., Milwaukee, WI 53218 waltherscornerstone.com I-933-3149