



Item No. 433-7483
ASSEMBLY INSTRUCTIONS


N SCALE FIRE DEPT

BEFORE YOU BEGIN, READ THESE INSTRUCTIONS CAREFULLY!

Please read each step and study the drawings before starting, noting what parts are needed. Part numbers are called out in the instructions and are molded on the sprues (the "rods" holding the parts). Don't remove parts until you need them. Carefully cut parts from the sprues with a hobby knife; make several light passes rather than trying to cut through all at once. For best results, cut between the part and the sprue then carefully scrape away any remaining plastic on the part. While painting is optional, it's easier to do before assembly and can be done using acrylic (water-based) paints, available at many hobby and craft stores. Test fit all parts before gluing to make sure they fit correctly. Attach plastic parts using cement for styrene (sold separately). Please read and follow the directions and safety precautions, and work in a well-ventilated area. Use glue sparingly, a little will do the job, and apply it on the inside where parts meet for a neat appearance.


STEP 1

Cement DOOR 14 (grooved side facing front) to DOOR FRAMES 18. Then cement DOOR FRAMES to the FRONT WALL 5. Cement WINDOW UNIT 8 and DOOR 10 to the back of FRONT WALL 5.

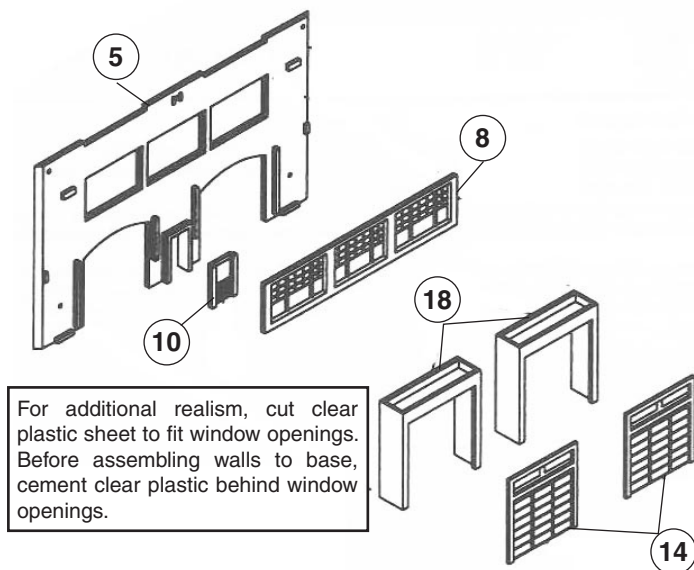


STEP 2

Cement WINDOW UNIT 3 to the back of REAR WALL 1

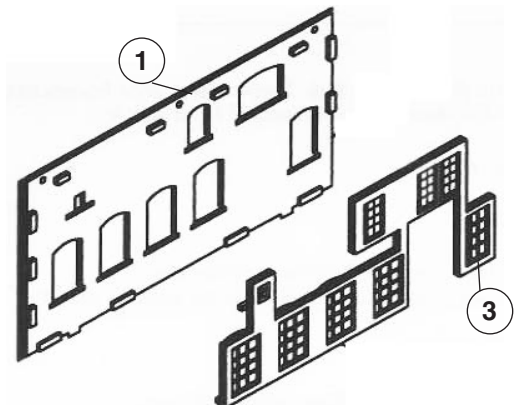


STEP 3

Cement WINDOW UNIT 4 to the back of SIDE WALL 2.

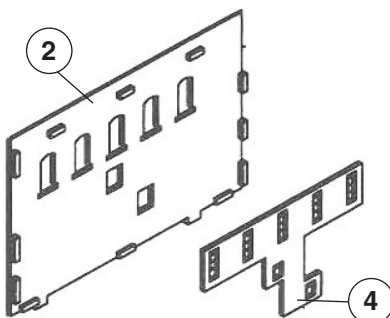


STEP 4

Cement WALL 17 to WALL 6. Be sure the brick faces the way the drawings indicate. Cement DOORS 15, 16 (door knob on right side) and WINDOW UNIT 9 to the back of WALL 6.

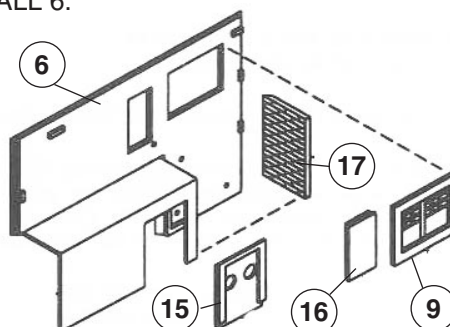


STEP 5

Cement WINDOW UNIT 11, 12 to the back of WALL 7.

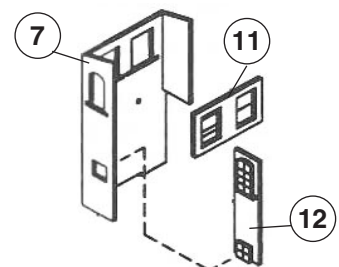


STEP 6

Cement WINDOW UNIT 13 to the back of HOSE TOWER WALL 25. Then cement the two HOSE TOWER WALL HALVES 25, 26 together.

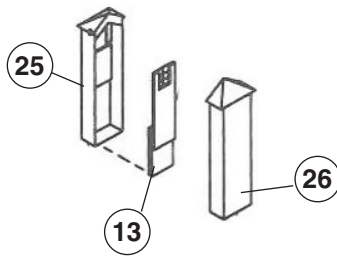

STEP 7


Cement CLOTHES RACK PIECES 41, 42 together. Cement SIREN 32 to SIREN BASE 37. Cement LIGHT POST 40 to LIGHT POST BASE 30. **Don't knock off the pin on part 40.**

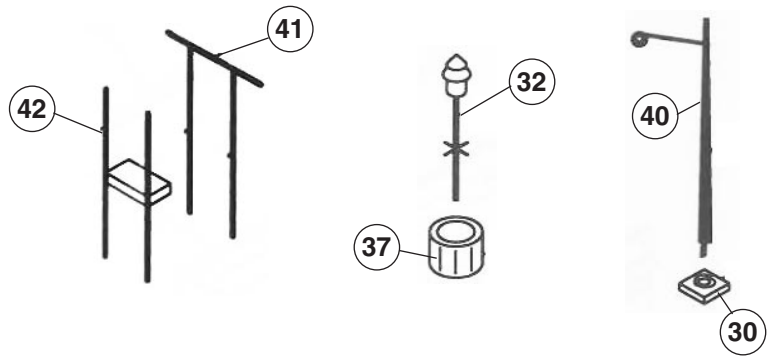

STEP 8


Cement the four WALLS 1, 2, 5, 6 together and to the BASE 19. Then cement ROOF 20 in place.

Blue cardboard included. Adhere behind windows on part 5
For best results use white glue

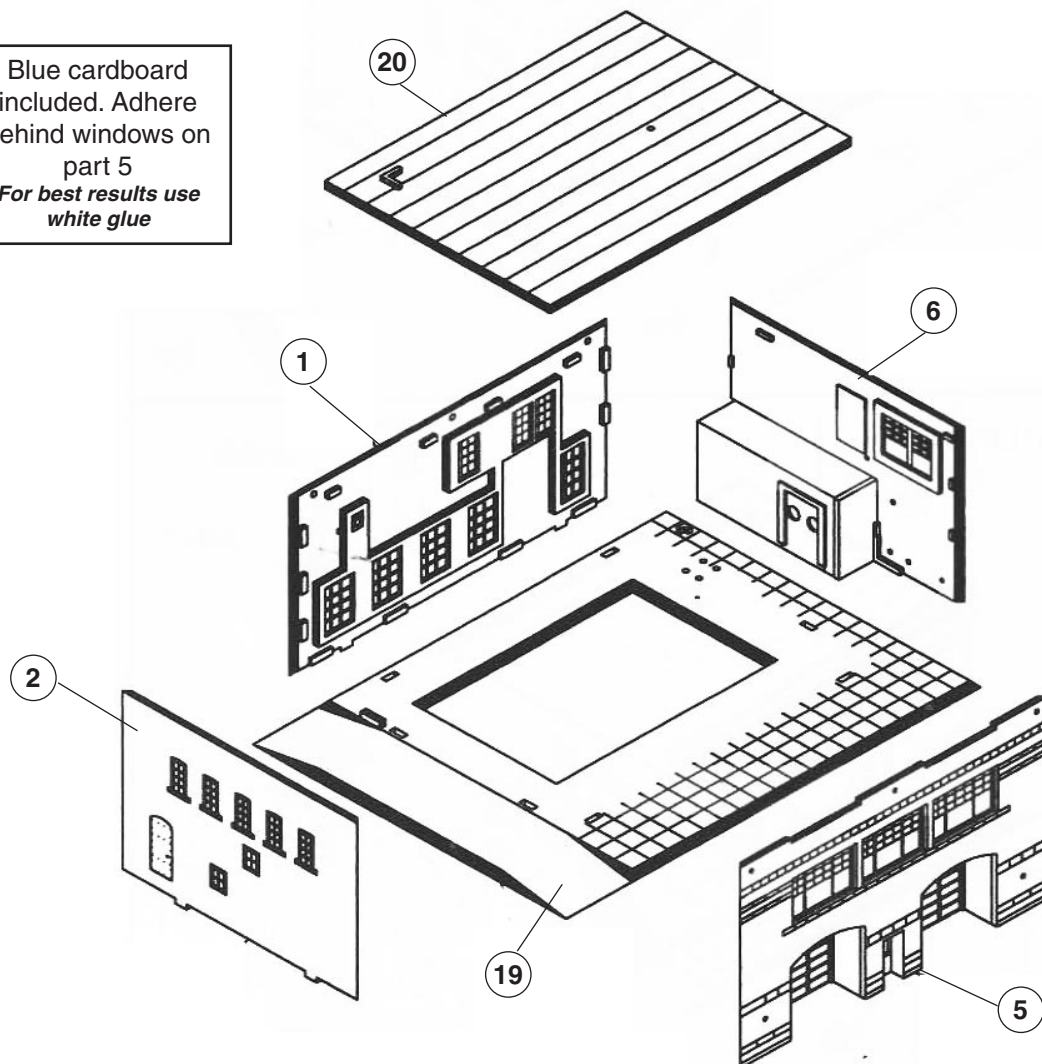

STEP 9


Cement HOSE RACK, BARREL 31, and TOOL RACK 36 in place **BEFORE** cementing STAIRWAY 27 to the SIDE WALL. There are locating holes for all four of these on the WALL and BASE. Cement REAR GUTTER 23 and DOWNSPOUTS 34 to the REAR WALL. Again there are holes to locate these two pieces. Cement DECORATIVE TRIM 22 to FRONT WALL 5. Glue PARTS 28, 29 into the holes provided on the FRONT WALL.

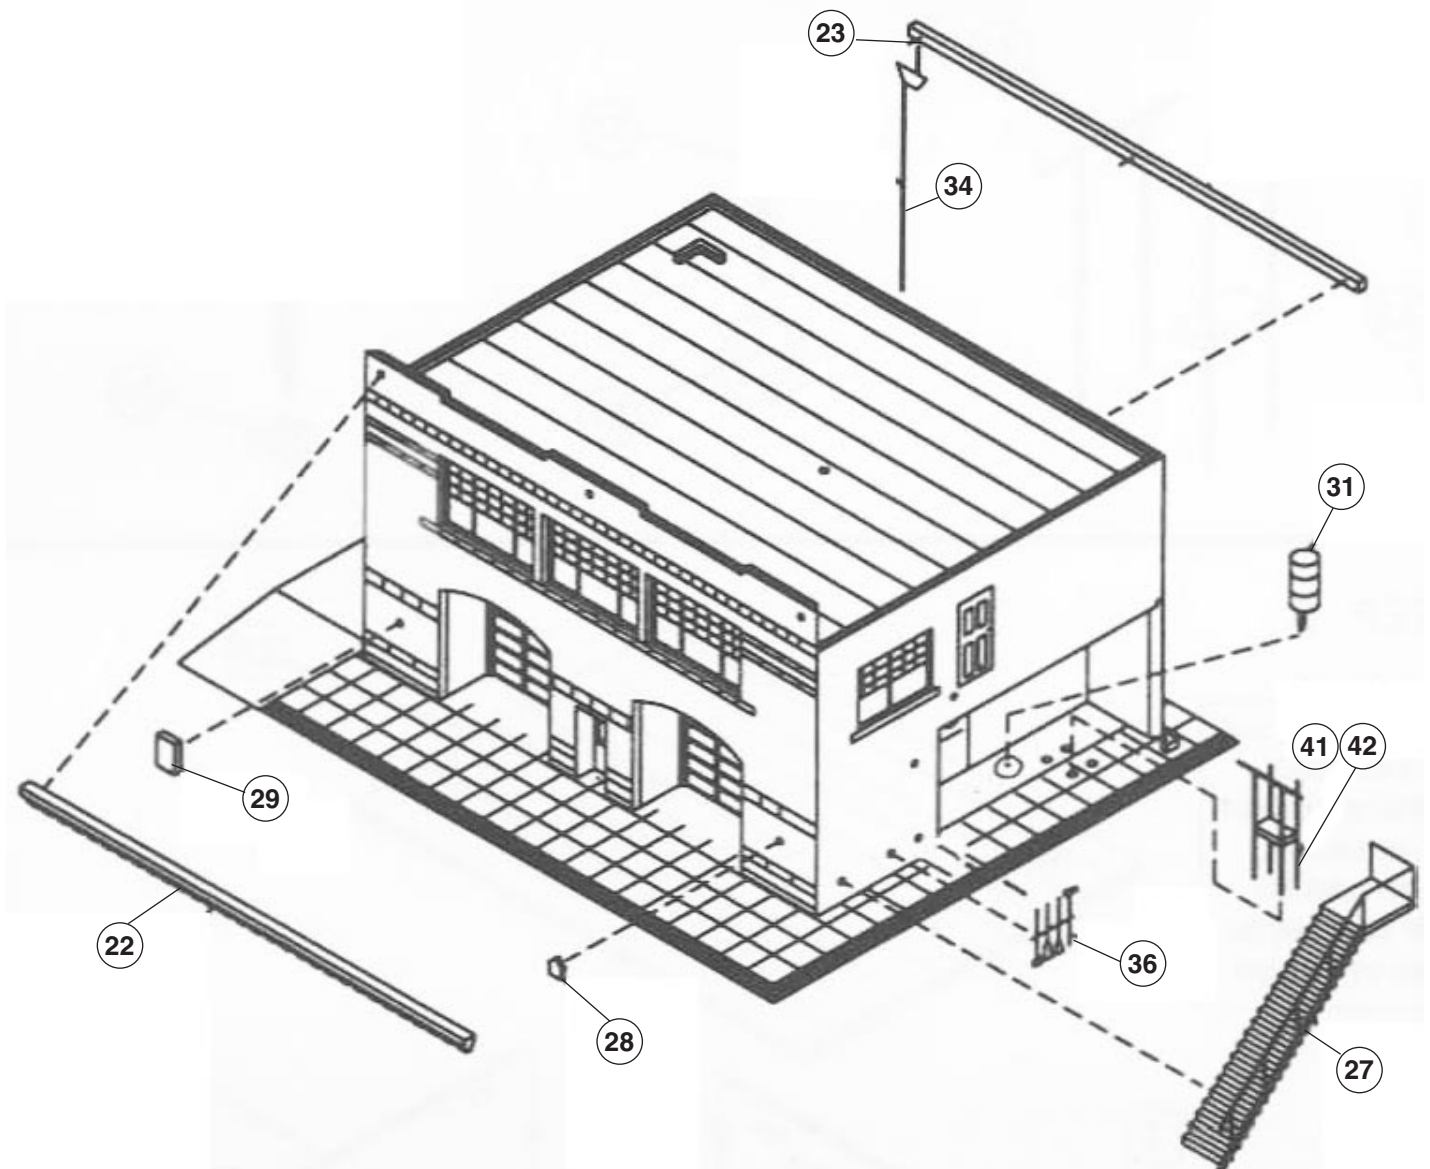

STEP 10

Cement WALL 7 to SIDE WALL of Fire House. Make sure it is flush with the REAR WALL. Cement ROOF 21 to WALL 7. Cement SIGN 24 to WALL 7. Cement SIGN 24 to WALL 7. Cement GUTTER 35 and DOWNSPOUT 33 to WALL 7. Cement HOSE TOWER to the ROOF using the raised angle on the ROOF as a guide. Cement SIREN into hole on ROOF. Add PLANT BOX 39 and STREET LIGHT as desired.

Flag Sticker included
Place on part #38

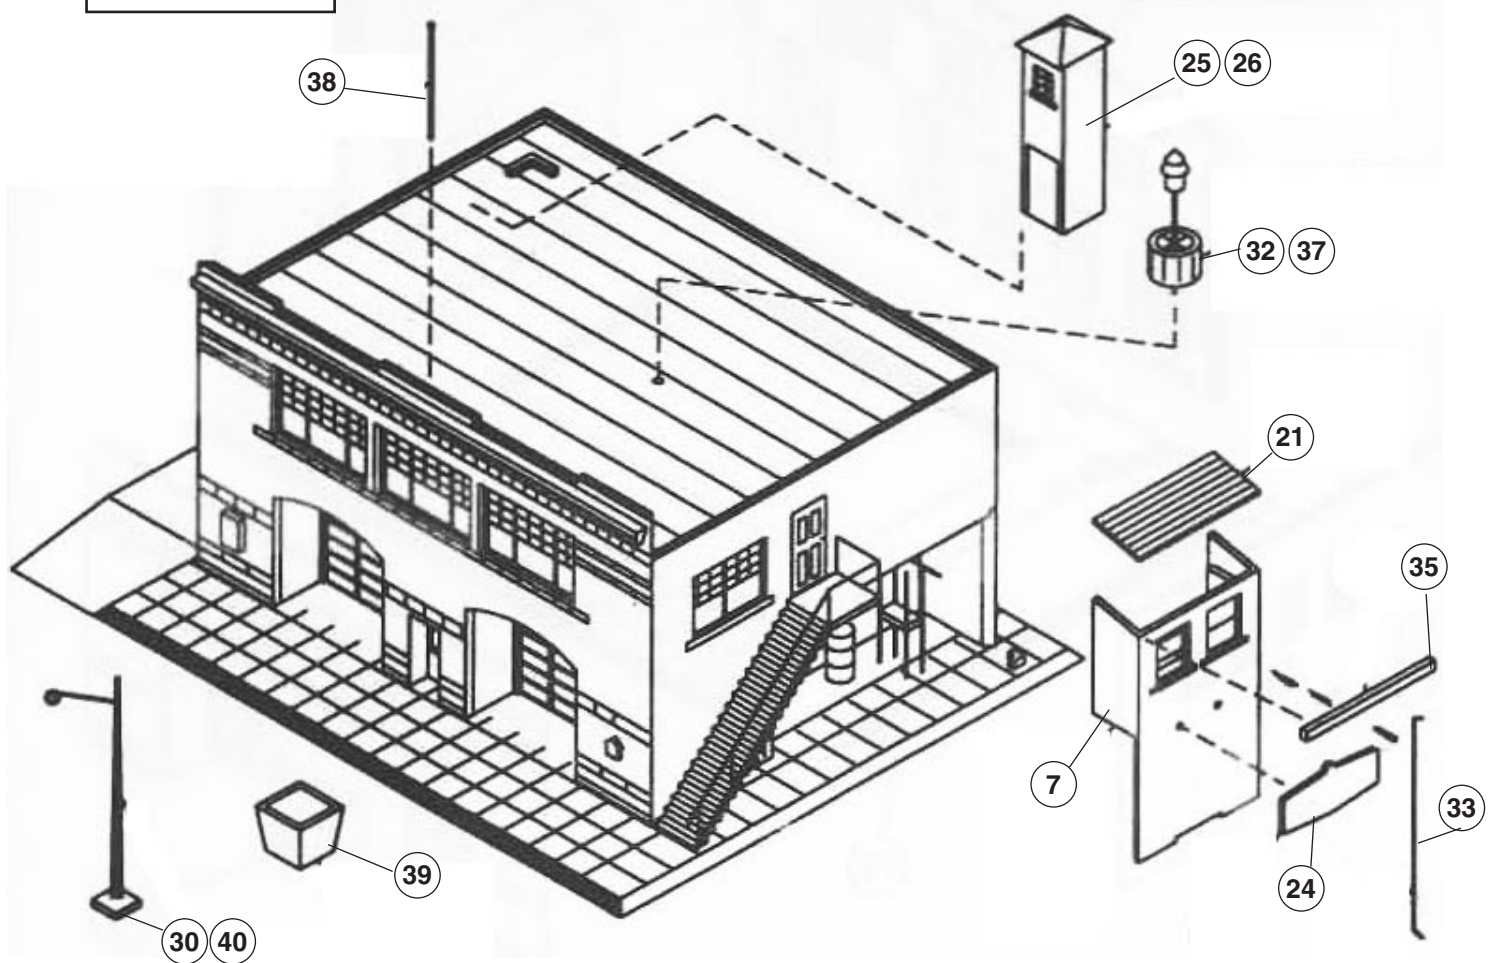

QUESTIONS? Call Life-Like's Toll-Free Consumer Helpline at:

1-866-833-1468

SERVICE DEPARTMENT HOURS: 9:00 AM — 3:30 PM (Central Time) MONDAY — FRIDAY