



HO Scale Kit MODERN CONVEYORS

933-3518

Thanks for purchasing this Cornerstone Series® Kit!
Please read all instructions before starting. All parts are molded in styrene plastic, so use glues and paints which are compatible.

Before Assembly


Check kit for proper number of parts. Cut and file flash from parts. Sand edges to ensure right angle joints with no gaps between parts.

Assembly

1. Glue the conveyor floor (20) on top of the ridges on the inside of the conveyor sides (18). Make sure that the ends of the floors are flush with the ends of the sides.
2. Glue the floor/side assembly on top of the conveyor bottom (17). The sides fit on the outside of the tabs found on the conveyor bottom.
3. Glue the railing (21) onto the side of the conveyor bottom.
4. You may glue the conveyor top (19) on now, making sure that the ends are flush with the sides. Or, you can glue the four sections together first, hooking the ends together (ridges and slots on the floor and pins and holes on the bottom) and then glue all the tops on.
5. Determine the height you want your conveyors. You can shorten the legs (16) by cutting them as seen on the right.
6. Glue Footings (15) to bottom of Legs (16). Then glue legs to bottom of Conveyor assembly.

Painting

You can paint this kit with brush, spray can or airbrush. Paint after assembly is complete to help cover up any seams. Weathering is optional.

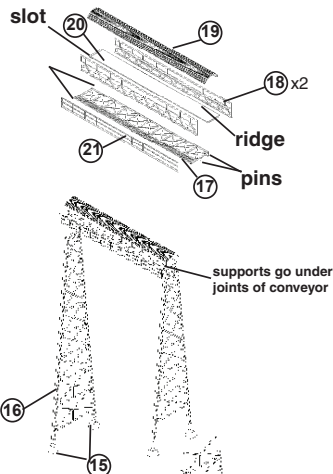

A typical section that can be removed to shorten the support, if desired.

