




N Structure Kit CAPE COD HOUSE 933-3839

Thanks for purchasing this Cornerstone kit. All parts are styrene plastic, so use compatible glue and paint to finish your model. PLEASE NOTE that optional parts for the Front Walls, Front Doors, Roof and Shutters are provided for easy customizing and realistic variety, and additional kits (each sold separately) can be built using the different parts for even more variety.


As English settlers arrived in America, they built small, practical homes based on those they left behind. These usually had two to four lower level rooms, with bedrooms in an upper half-story or attic. Harsh winters led to low ceilings and a central chimney connecting fireplaces in each room, and a steeply pitched roof to shed snow. The name "Cape Cod" became common after 1800 when a book about the region referred to the sturdy and widely used design as "Cape Cod houses." The design was modernized as the "Colonial Revival" in the 1930s with small dormers to increase upstairs living space, and a central furnace so the chimney could be placed anywhere on the roof. As severe housing shortages developed across America after WWII, the small Cape Cod provided a solution as it could be built quickly and cheaply using less material. Thousands were mass-produced and filled entire subdivisions nationwide, many of which are still home sweet home today.

Perfect for any layout from the 1930s to the present day, your new model will come to life with figures, vehicles and other accessories. See your local hobby shop, check out the current Walther's N&Z Scale Model Railroad Reference Book, or visit us online at walthercornerstone.com

1) Decide if you will use Front Wall #2 (three windows) or #6 (two windows). The top edge of each window has a slight lip; make sure windows are placed correctly and glue in place. Glue your choice of doors (8 or 9) to the Front Wall. Glue Kitchen Door (10) to Right Wall (3). With all doors and windows in place, cut acetate "glass" to fit each wall and glue in place.

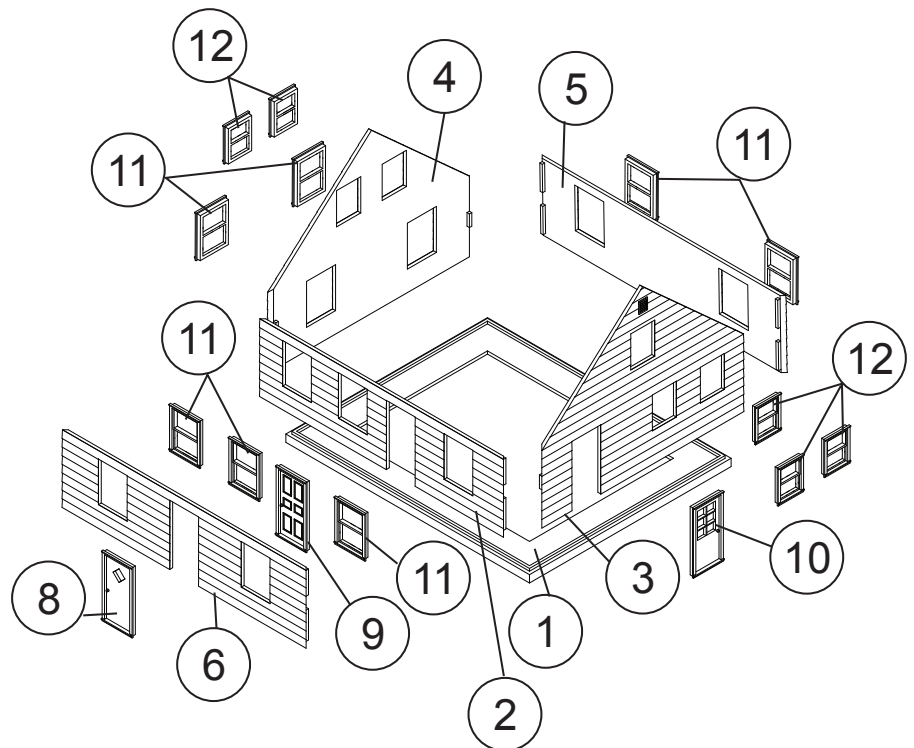

2) Using the raised ridges on the Base (1) to align parts, glue Walls (2 or 6, 3, 4 & 5) to Base and at inside corners where parts meet. Glue Steps (2x 21) in place under Kitchen and Front Doors. Shutters (6x 18) are optional and may be installed alongside front windows if desired.

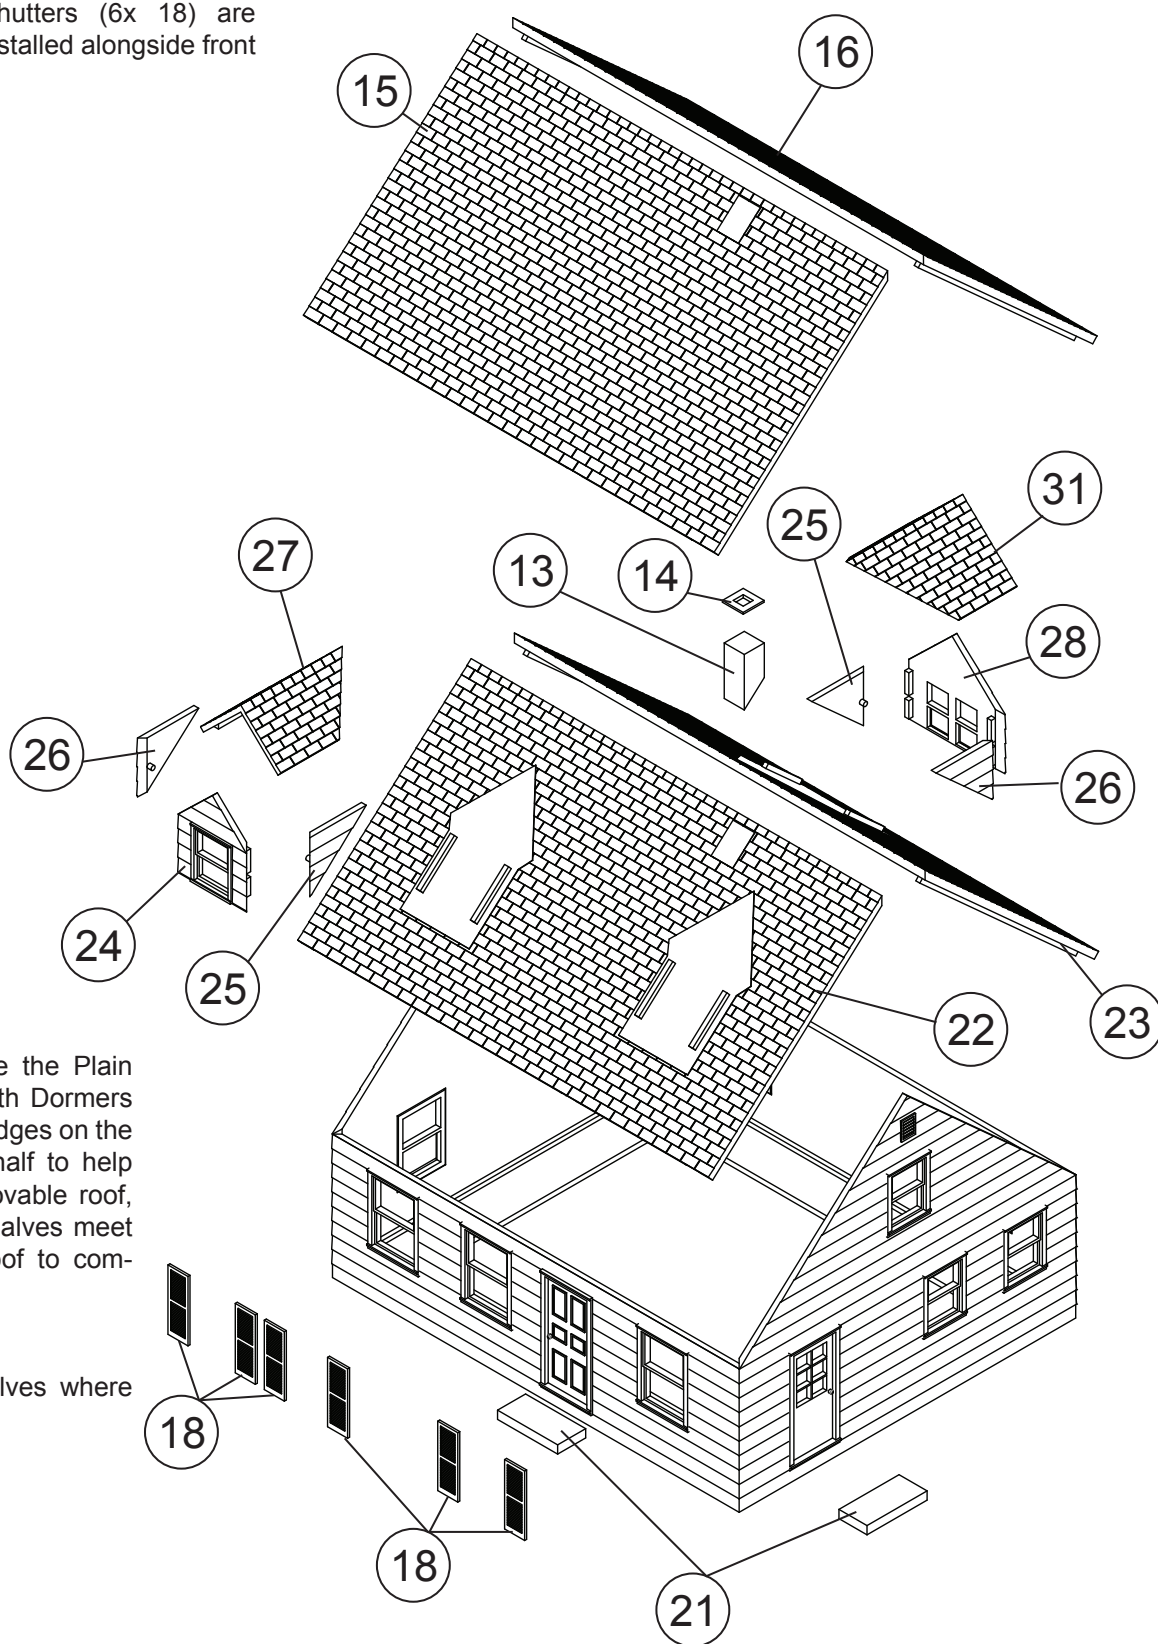

ROOF AASSEMBLY

3) Decide if you will use the Plain Roof (15, 16) or Roof with Dormers (22, 23). Use the raised ridges on the underside of each roof half to help align parts — for a removable roof, glue halves only where halves meet at the center, or glue roof to completed wall assembly.

Plain Roof:

Glue Front and Rear halves where parts meet at the center.

Dormer Roof:

Cut acetate “glass” and glue in place with white glue on Small Dormer Front (2x 24) and Large Dormer Front (28). Glue Dormer Side Walls (3x 25 Right Side, 3x 26 Left Side) to Dormer Fronts. Glue two Small Dormers to inset areas on Front Roof and single Large Dormer to Rear, along raised ridges as shown.

Chimney (both versions)

Glue Chimney (13) to Chimney Cap (14) together, and to inset area on Front Roof.