



# HO Structure Kit BAILEY SAVINGS & LOAN 933-3031

Thanks for purchasing this Cornerstone kit. All parts are styrene so use compatible glue and paint to assemble and finish your model. Please take a few minutes to read these instructions and study the drawings before starting construction. PLEASE NOTE: the sidewalls (5 and 6) are interchangeable and can be installed on the left or right as desired.


The central business district was a source of considerable civic pride in growing American towns and cities of the early 1900s. Many of the buildings being constructed in this prestigious location were designed in the new "Beaux Arts" (fine arts) style, which drew inspiration from classical forms. Details such as columns, arches and cut stone were applied to most surfaces, helping project an air of strength, power and security. Ideal for large buildings, architects also incorporated scaled-down versions of these elements into smaller buildings, where the design became a favorite with the banking industry, and were often used on public buildings such as libraries and city halls. An anchor of both the central business district and outlying commercial areas, your new model will be right at home on any layout from the early 1900s to the present. As the stone decoration was not easily removed or modified, the exterior remained largely unchanged over time, and today, they can be found side-by-side with other renovated buildings, housing shops, restaurants and other businesses. See your local hobby shop, the current Walthers HO Model Railroad Reference Book or visit us online at [walthers.com](http://walthers.com) for additional ideas and accessories to complete your model.

Front Wall (2): Entry Door (13) and Entry Door Glass (18), Entry Transom (15) and Transom Glass (19), Standard Windows (2x 16) and Standard Glass (2x 20), Interior Cornice (2x 8).

Sidewall with Windows (6): Arched Windows (5x 17) and Arched Window Glass (5x 20), Standard Windows (5x 16) and Standard Glass (5x 20), Interior Cornice (2x 7).

Plain Sidewall (5): Interior Cornice (2x 10).


Rear Wall (4): Rear Door (14), Standard Windows (7x 16) and Standard Glass (7x 20).

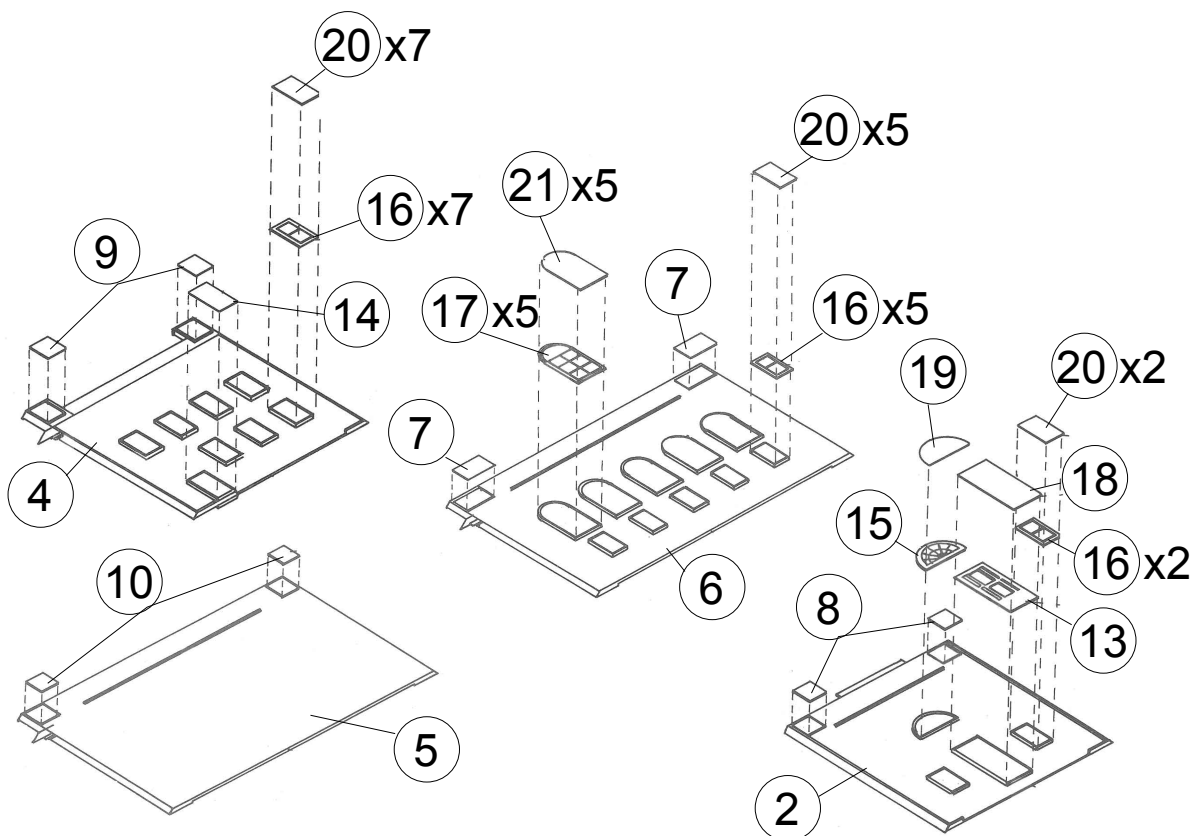

1) PLEASE NOTE: Sidewalls (5 and 6) are interchangeable and can be installed on the left or right as desired. Note the raised ridges on Base (1), using these to help align parts, glue Walls (2, 4, 5 and 6) to base and at inside corners where parts meet.

2) Glue Facade (3) and Stairs (11) to Front Wall (2) as shown.

3) Roof (12) may be set in place on molded ridges as shown if you wish to add lighting or interior details (both sold separately), or glued in place.

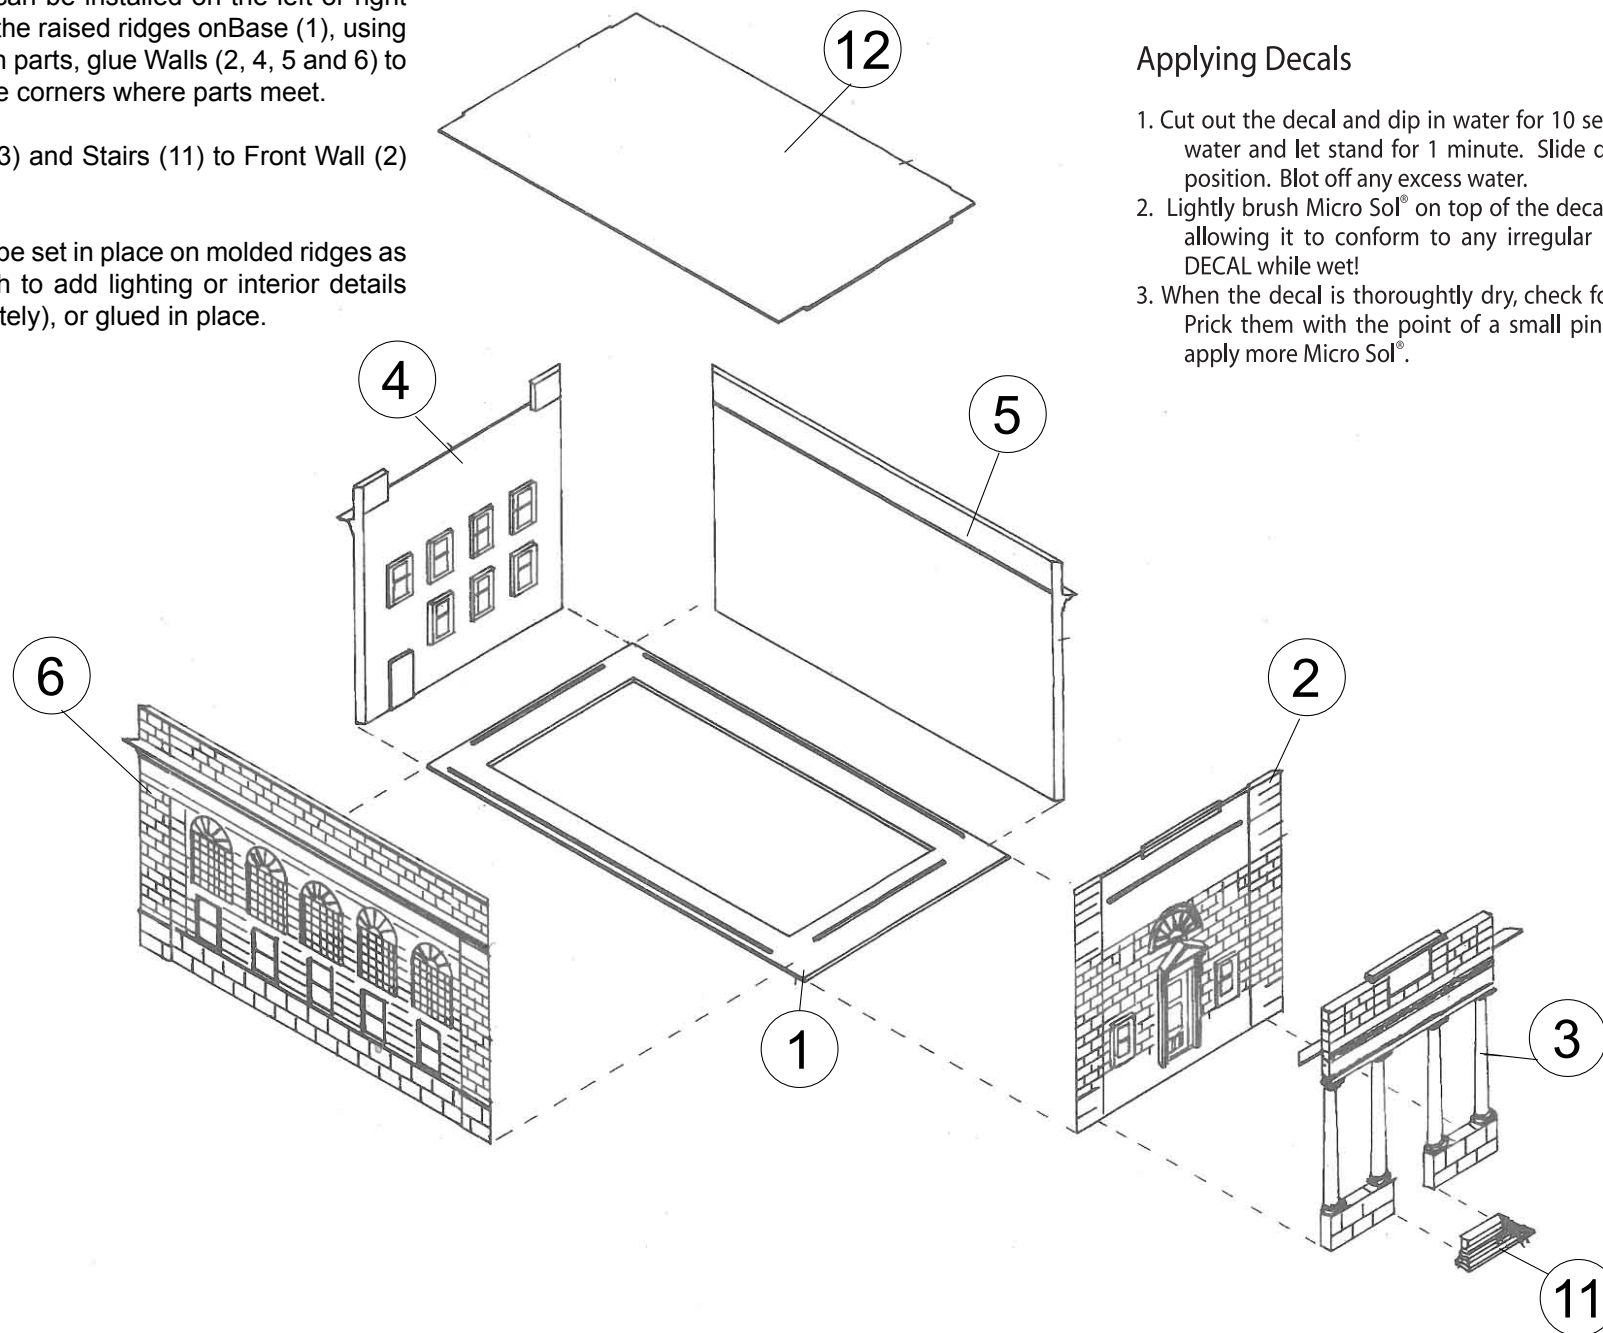

## Applying Decals

1. Cut out the decal and dip in water for 10 seconds. Remove decal from water and let stand for 1 minute. Slide decal onto surface and into position. Blot off any excess water.
2. Lightly brush Micro Sol® on top of the decal. This will soften the decal allowing it to conform to any irregular surfaces. DO NOT TOUCH DECAL while wet!
3. When the decal is thoroughly dry, check for any trapped air bubbles. Prick them with the point of a small pin or hobby knife blade and apply more Micro Sol®.