



HO Structure Kit POST ROAD PET SUPPLY 933-3660


Thanks for purchasing this Cornerstone® kit. Please read these instructions and study the drawings before starting. PLEASE NOTE: All plastic parts are made of styrene, and most will simply snap in place. Some may require gluing as noted in the instructions, using cement made for styrene (sold separately). For a more permanent and sturdy structure you can also glue all parts together at the snap fit locations. Windows are molded as complete subassemblies with "glass" already in place, and windows can be detailed with the printed curtains, and/or the unique window lighting kit, both included with your new model. If you wish to paint any parts, do so before starting construction using plastic-compatible paints.

For millions of years, humans have shared their food and fires with small animal companions. The first were likely cats, prized for their ability to hunt rats and mice that threatened grain supplies. Dogs were not only helpful hunters, their keen eyesight, hearing and sense of smell gave warning of approaching threats long before they were obvious to humans. Training such animals also created a need for the first pet supplies — leashes and collars. In ancient Egypt and Greece, animal ownership was a sign of wealth and power, and owners displayed their animal's status with the first lavishly decorated collars. By the mid-1800s, more people were living in cities and regarding animals as companions. New manufacturing methods and better transportation gave rise to specialty retailers selling both pets and supplies ranging from health remedies to how-to pamphlets and food products. Larger retailers, such as department and dime stores also began carrying a limited selection of pet products. Today, pet stores cater to a wider selection of animal owners than ever before, from chain stores that offer something for everyone, to highly focused mom-and-pop operations that specialize in a single type of pet. See your local hobby dealer, check out the current Walthers Model Railroad Reference Book or visit us online at walthers.com for additional figures, scenery materials, vehicles and other details to complete your new model.

PLEASE NOTE: Before completing each wall assembly, you may wish to add the printed-paper curtains, details, and/or interior lighting (as shown on the Lighting instruction sheet). If desired, trim Printed Curtains and Details from sheet and attach to the back of the "glass" on any window with a small piece of tape or white glue.

1) Note the correct placement and insert Windows (4x 1/1) to rear of Upper Front Wall (101/1).




2) Insert Front Entry Doorway (2/8) to Lower Front Wall Glass (3/9). Insert Side Entry Windows (2x 2/7) to Lower Front Wall Glass. Insert Entry Ceiling (5/14) to Front Entry Doorway. Insert completed Lower Wall Glass in Lower Front Wall.

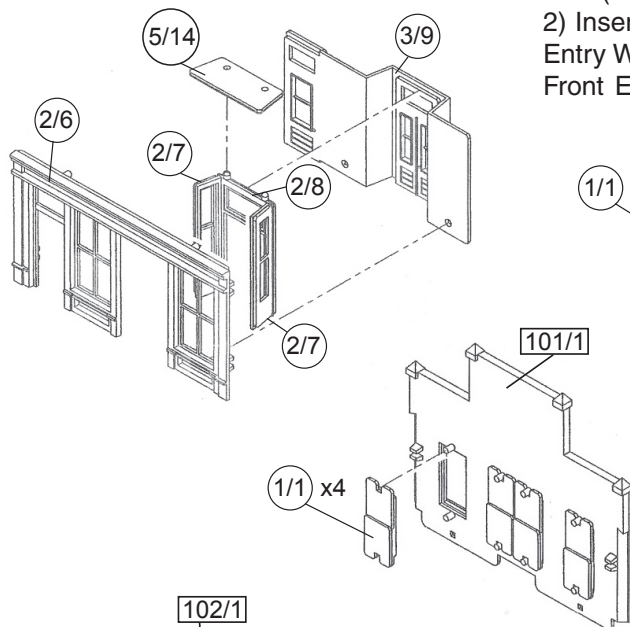


Insert completed Upper Front Wall in Lower Front Wall.

3) PLEASE NOTE: Side Walls (2x 102/2) are identical. Note the correct placement and insert Windows (4x 1/1; 2 per each wall) in back of Side Walls.

4) Note the correct placement and insert Windows (3x 1/1) and Transom Window (1/2) to back of Rear Wall (102/1). PLEASE NOTE: Make sure Door (11/26) faces correctly (doorknob to your right, no trim at bottom) and glue to window opening as shown. Insert Rear Door (11/25) in Rear Wall.

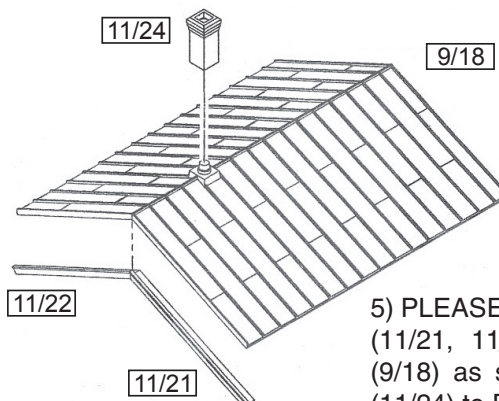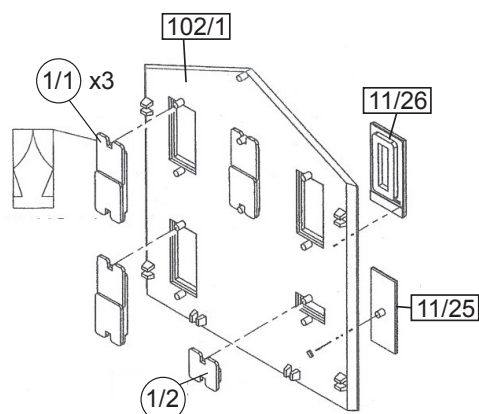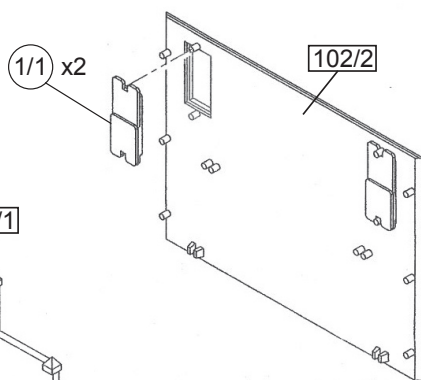

5) PLEASE NOTE: Glue Cornices (11/21, 11/22) to rear of Roof (9/18) as shown. Glue Chimney (11/24) to Roof as shown.

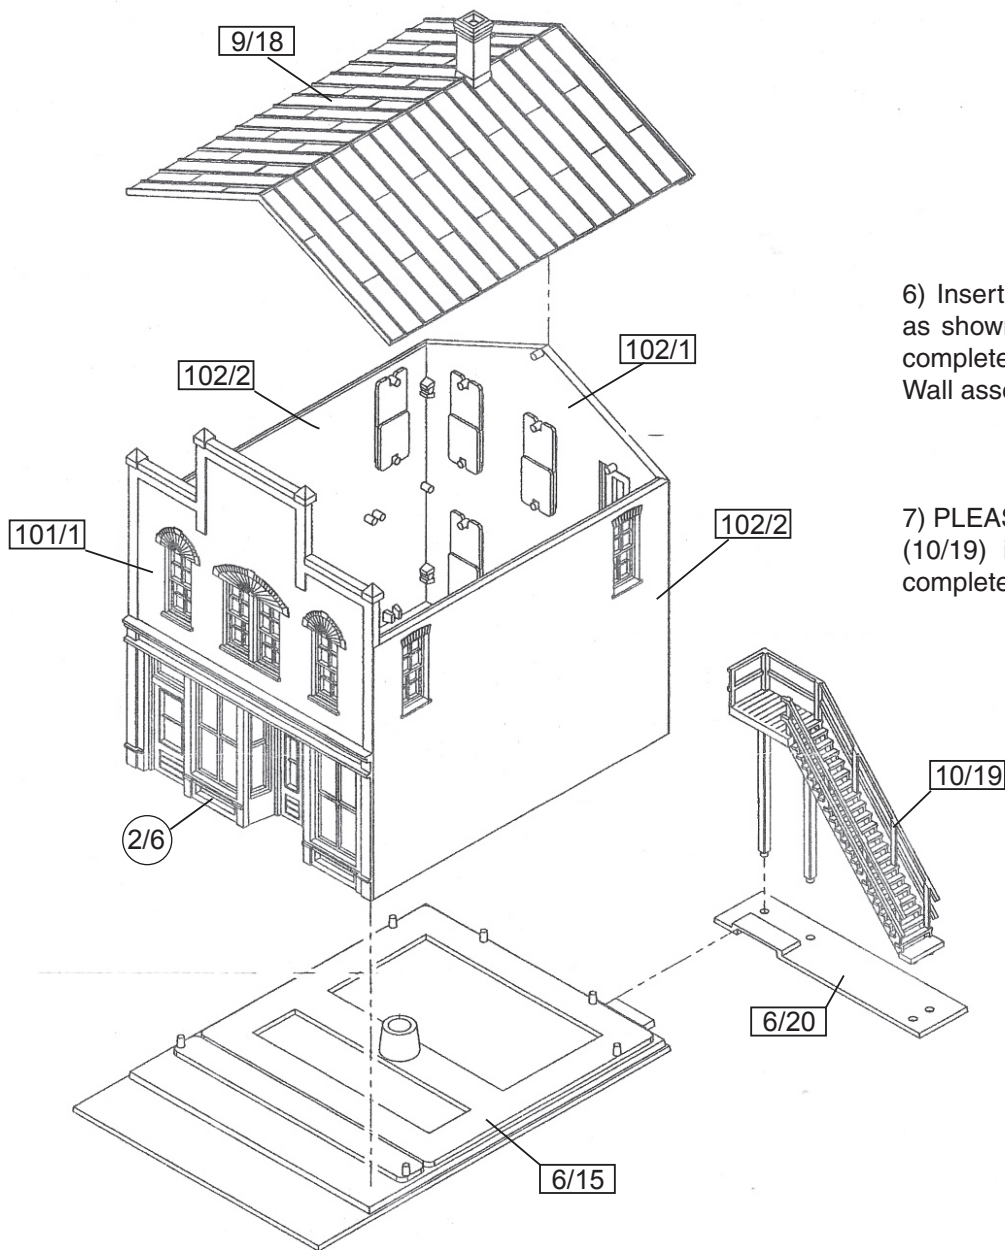

6) Insert completed Walls in Base (15) as shown and at inside corners. Insert completed Roof assembly to completed Wall assembly.

7) PLEASE NOTE: Insert Exterior Stairs (10/19) in Stair Landing (6/20). Glue completed Stair Landing to Base (6/15).

Applying Decals

1. Cut out the decal and dip in water for 10 seconds. Remove decal from water and let stand for 1 minute. Slide decal onto surface and into position. Blot off any excess water.
2. Lightly brush Micro Sol® on top of the decal. This will soften the decal allowing it to conform to any irregular surfaces. DO NOT TOUCH DECAL while wet!
3. When the decal is thoroughly dry, check for any trapped air bubbles. Prick them with the point of a small pin or hobby knife blade and apply more Micro Sol®.

